

L.SP3 CONFIGURATOR

YOUR PERSONAL L.SP3 SOLUTION

MEHR ALS EINE IDEE MEHR

- Log in | Registration
- Start: your fastening application
- L.SP3 access | inline | straight | angle
- L.SP3 touch
- L.SP3 connect
- L.SP3 angle
- Tool selection | Service | Your configuration result

AGENDA

Log in | Registration

- Start: your fastening application
- L.SP3 access | inline | straight | angle
- L.SP3 touch
- L.SP3 connect
- L.SP3 angle
- Tool selection | Service | Your configuration result

L.SP3 CONFIGURATOR CONFIGURATOR ACCESS VIA LÜBBERING WEBSITE



More Fastening Drilling Application	ons Service Contact			
Fastening with LSP3 LSP3 system LSP3 angle LSP3 special	MEHR ALS EINE IDEE I	MEHR		•LUBBERING*
LSP3 applications LSP3 configurator EVENUE THE LÜBBERING SHOWTRUCK IS ON ITS WAY TO YOU.	de I en LOGIN.	L<u>SP</u> 3°	e de la constante de la consta	Home I Register I Login I Imprint
MEHR ALS EINE IDEE MEHR				
Fair Dates	Email Password	Login		
	Register as new user Forgot password?			

Register quickly and easily on our website: www.luebbering.de/configurator

MEHR ALS EINE IDEE MEHR

30.11.2017 | L.SP3 configurator | Version: 2

- Log in | Registration
- Start: your fastening application
- L.SP3 access | inline | straight | angle
- L.SP3 touch
- L.SP3 connect
- L.SP3 angle
- Tool selection | Service | Your configuration result

YOUR CONFIGURATION START WITH SELECTION OF YOUR FASTENING APPLICATION (1/2)



MEHR ALS EINE IDEE MEHR	• LUBBERING
_	Home I My configurations I My settings I Logout I imprint
<	Fastening application
YOUR ENTRIES	
YOUR SELECTION	FASTENING APPLICATION DETAILS
	Screw Screw
	Tightening torque 120,00 Nm 1062,09 in:tbs
	Across flats 17,000 mm 0,6 inch/dec. 43/64" inch
	SELECTION OF FASTENER PROFILE
	AF Across flats male
[SP 3]	Continue

CONFIGURATION START

- Start your fastening application.
- Depending on the fastening selection, additional entry fields will appear if necessary.
- You will get an illustration for explanation on the right by clicking in an entry field (cf. width across flats).
- For an easier selection, all output socket gear profiles are displayed visually.

YOUR L.SP3 CONFIGURATION START WITH SELECTION OF YOUR FASTENING APPLICATION (2/2)



	MEHR ALS EINE IDEE MEHR		F	OR A	٩ER	OSPACE		
	Home I My configurations I My settings I	I Logout I Imprint						
>	Factoring application FASTENING APPLICATION DETAILS			apr In a we	olicat addit II as	tion (and for t ion, specifica the requested	tion data for the l he head nut) car tions to the holde d retaining profile Drive application	n be put in. er unit as e will be
	Igmaining torque 120,00 Nm 1062.09 in.bit Across flata 10,000 mm 0,394 inch/dec. 25/64* inch					×		
	SELECTION OF FASTENER PROFILE	TYPE OF APPLIC		Drive 🔿 Torque d	ontrol			
	AF Across fists male	FASTENER SPE Collar	ECIFICATION	N	Code			
	HOLD + DRIVE / HOLDER UNIT SPECIFICATIONS Across flats mm inch/dsc. inch External length mm inch/dsc. inch Langth of fastening mm inch/dsc. inch SELECTION OF RETAINING PROFILE	Boit A/F OF FASTEN A/F collar (W) A/F bit (Y)	 Ning Comp(PONENT	Code			
	HEX Hexagon profile female Continue	MAX. TORQUE				Apply Cancel		

- Log in | Registration
- Start: your fastening application
- L.SP3 access | inline | straight | angle
- L.SP3 touch
- L.SP3 connect
- L.SP3 angle
- Tool selection | Service | Your configuration result

L.SP3 CONFIGURATOR L.SP3 ACCESS | SELECTION OF THE MODEL



	MEHR ALS EINE IDEE MEHR		• LÜBBERING*	FO	OUR DIFFERENT MODELS
			Home I My configurations I My settings I Logout I Imprint.		
	YOUR ENTRIES FASTENING APPLICATION	Fastening application SELECTION OF GEARBOX	Model		Standard model of a geared offset head (with angle head): L.SP3 access
	Fastener Hold + Drive Fastener profile AF Across flats male Tightening torque 120.00 Nm 1062.09 in.lbs Nominal width of drive profile 10.00 mm 0.39 inch 25/64" YOUR SELECTION	LSP3 access	LSP3 access inline	•	 Straight-line geared offset head: L.SP3 access inline Individual angle head: L.SP3 angle
>	documented on the left. Via the black button, you are able to blend them for a wider screen.				 Axial geared offset head L.SP3 access straight only applicable when Hold+Drive has been selected beforehand.
	[SP 3 [°]	L.SP3 angle	L.SP3 access straight		If the fastening application "cap nut" (pipeline) has been selected, only open geared offset heads will be displayed.

L.SP3 CONFIGURATOR L.SP3 ACCESS – DETAILS ON YOUR OUTPUT SOCKET GEAR



MEHR ALS EINE IDEE MEHR						• LUBBERING [®]
-						Home I My configurations I My settings I Logout I Imprint
Fastening application	M	odel		L.SP3 access		L.SP3 touch
OUTPUT SOCKET GEAR SPECI	FICATIONS					
Total length L max.	mm		inch/dec.		inch	
External length EL min.	mm		inch/dec.		inch	
External length EL max.	mm		inch/dec.		inch	
Output socket gear: through profile						
Profile depth P min.	mm		inch/dec.		inch	
Opening width C min.	mm		inch/dec.		inch	
Selection of output socket gear profile		Hexagon profile 🔽				
Continue						

Very useful:

Automatic conversion in inch | A click in the entry field shows a drawing for explanation.

If "fastening with nut / bit" has been selected, further details on the nut follow.

AGENDA

- Log in | Registration
- Start: your fastening application
- L.SP3 access | inline | straight | angle

L.SP3 touch

- L.SP3 connect
- L.SP3 angle
- Tool selection | Service | Your configuration result

L.SP3 CONFIGURATOR DETAILS ON YOUR GEARED OFFSET HEAD | L.SP3 TOUCH



MEHR ALS EINE IDEE MEHR							■ LUBBERING [®]
							Home I My configurations I My settings I Logout I Imprint
Fastening applica	ation		Moo	del			LSP3 access
GEARED OFFSET HEAD SPEC	FICATIONS						
Radius R max.	20,000	mm	0,787	inch/dec.	25/32"	inch	
Housing height H max.		mm		inch/dec.		inch	· · · · · · · · · · · · · · · · · · ·
Width W max.		mm		inch/dec.		inch	
Centre to centre distance L1 min.		mm		inch/dec.		inch	
Centre to centre distance L1 max.		mm		inch/dec.		inch	
Extension length L2 min.		mm		inch/dec.		inch	
Nose radius E max.		mm		inch/dec.		inch	
□ Fastening with nut / bit							
Continue							

By entering your specifications a picture is shown.

L.SP3 CONFIGURATOR SELECTION OF GEARED OFFSET HEAD & OUTPUT SOCKET GEAR



IEHR ALS EI	NE IDEE MEHR						•	UBBERING
					Home	Meine Konfigurati	onen I Meine Einstell	lungen I Logout I Impre
S	chraubfall	Bauform	L.SP3	access	LSP3	touch	Au	swahl
AUSWAHL FI	ACHABTRIEB							mm inch
Artikel-Nr.	Bezeichnung	R (mm)	H (mm)	L1 [mm]	L2 [mm]	B (mm)	max. T [N	m] n
80433101 80443101	L.SP3 access C-190-005	19,100	29,000 29,000	106,900 143,750	74,400	43,600 43,600	125,000	3
89433204	L.SP3 special access C-140-001	18,050	32.000	95,655	11,000	41,400	130,000	
80443215	L.SP3 access C-140-006	19,600	32,000	129,700	100,700	42,000	135,000	3 4 2 3
80423216	L.SP3 access C-140-004	19,600	32,000	63,100	34,100	42,000	135,000	2
80433210	L.SP3 access C-140-005	19,600	32,000	96,400	67,400	42,000	135,000	3
80643000	L.SP3 special access C-250-011	18,500	30,000	125,400	69,700	38,500	140,000	4
89673200	L.SP3 special access C-500-004	19,000	32,000	218,900	103,400	38,000	140,000	6
Anzahl Treffer: 1	4							
AUSWAHL A	BTRIEBSZAHNRAD							
Artikel-Nr.	Bezeichnung	SW [mm]	SW [inch]	Profil	L [mm]	AL (mm)	P (mm)	C (mm)
70994215	L.SP3 touch HEX17	17,000	~ 43/64	HEX	29,000	0,000	7,000	-
70994216	L.SP3 touch HEX17	17,000	~ 43/64	HEX	44,000	15,000	7,000	
70994217	L.SP3 touch HEX17	17,000	~ 43/64	HEX	59,000	30,000	7,000	-

🗆 Flachabtrieb mit Schutzüberzug

Abtriebsrichtung

🔘 nach unten 💿 nach oben

SELECTION

- Best match: marked in grey
 - Presorting of the geared offset head:
 1. lowest output torque comes first
 - Presorting of the output socket gear:
 - 1. Nominal width output profile
 - 2. Output profile (A/F and profile)
 - 3. Length (EL= 0 comes first);
 - 4. Opening width
- Sorting with click on the column heading
- Can be shown in mm or inch
- By moving the mouse cursor over the column headings an explaining picture is shown
- If your desired article is not available yet, a P-article is shown in grey. Moreover, you receive adjacent suggestions and can choose an alternative article.

- Log in | Registration
- Start: your fastening application
- L.SP3 access | inline | straight | angle
- L.SP3 touch
- L.SP3 connect
- L.SP3 angle
- Tool selection | Service | Your configuration result

LSP3 CONFIGURATOR ZUBEHÖRAUSWAHL ZWISCHEN FLACHABTRIEB & WINKELKOPF



EHR ALS EINE IDEE MEHR				Home I My confi	IUBBERING®
Fastening application	Model	LSP3 access	L.SP3 touch	Selection	LSP3 connect
ACCESSORIES					
LSP3 connect Index		LSP3 connect flange		Torque reaction bar	i des
without accessories					
Continue					
continue.					


L.SP3 CONNECT

Select:

- L.SP3 connect index for a turn of the angle head by 360°
- L.SP3 connect flange to attach further accessories
- Torque reaction bar

- Log in | Registration
- Start: your fastening application
- L.SP3 access | inline | straight | angle
- L.SP3 touch
- L.SP3 connect
- L.SP3 angle
- Tool selection | Service | Your configuration result

L.SP3 CONFIGURATOR ANGLE HEAD SELECTION

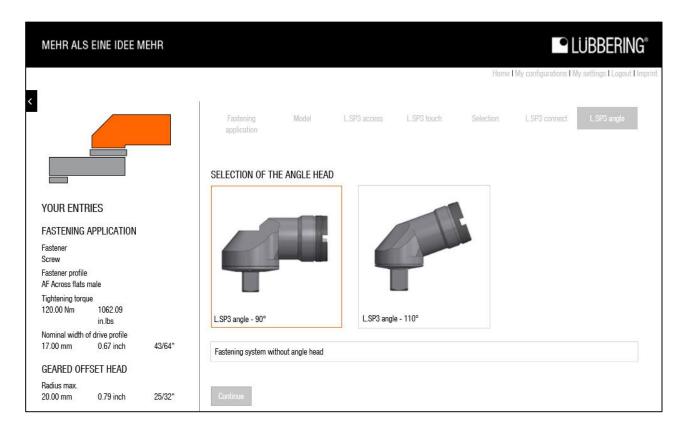

Select a LÜBBERING angle head L.SP3 angle in 90° or 110° and no adapter is needed.

MEHR ALS EINE IDEE MEHR

30.11.2017 | L.SP3 configurator | Version: 2

LÜBBERING

- Log in | Registration
- Start: your fastening application
- L.SP3 access | inline | straight | angle
- L.SP3 touch
- L.SP3 connect
- L.SP3 angle
- Tool selection | Service | Your configuration result

L.SP3 CONFIGURATOR



MEHR ALS EINE IDEE MEHR		TOOL SELECTION
	Home I My configurations I My settings I Logout I Imprint	
	Fastening Model LSP3 LSP3 touch Selection LSP3 LSP3 angle Tool application access connect	 Selectable: Model
YOUR ENTRIES	SELECTION OF DRIVE MACHINE	
FASTENING APPLICATION	Model Straight spindle	Energy
Fastener Screw		 Tool manufacturer
Fastener profile AF Across flats male	Power electric Manufacturer All	
Tightening torque 120.00 Nm 1062.09 in lbs Nominal width of drive profile 17.00 mm 0.67 inch 43/64" GEARED OFFSET HEAD Radius max. 20.00 mm 0.79 inch 25/32" OUTPUT SOCKET GEAR Across flats 17.00 mm 0.67 inch 43/64" YOUR SELECTION Geared offset head LSP3 access C-190-005 Output socket pear LSP3 conchet PEI77 Angle head LSP3 conchet index 190	E2I Tool will be provided Article no. Description Manufacture furgue Max. cutput forgue n max. [1/min] Weight [kg] Length [mm] 60301076 ETD ST61-120-13 without furgue Atlas/Copco 25,00 125,00 505 429,000 60301058 ETD ST61-120-13-T25 without drive unit Atlas/Copco 25,00 125,00 305 518,000 60301057 ETD ST61-120-13-T25 without drive unit Atlas/Copco 25,00 125,00 305 518,000 60301057 ETD ST61-120-13-T25 Atlas/Copco 25,00 125,00 505 518,000 60301057 ETD ST81-120-13 Atlas/Copco 25,00 125,00 505 518,000 60300253 HCX131ZV12 AMT 27,00 131,00 506 508,000 60300966 ESV146 Bosch Reoroth 29,00 146,00 420 430,000	If you already have a tool and you find it in the given table, please pick "tool provision".

L.SP3 CONFIGURATOR SELECTION OF SERVICES




EHR ALS EINE IDEE MEHF	3					jbbering
				Home	My configurations I My	settings I Logout I Imp
Fastening Model application	LSP3 access L	LSP3 touch Selection	L.SP3 connect	L.SP3 angle	Tool	Service
RUNNING-IN CERTIFICATE						
Article no.	Description	1				
	without MF	Ð				
D0000372	Machine Ca	apability Test 25 - Power Tool				
D0000373	Machine Ca	apability Test 50 - electric power to	ol			
D0000374	Machine Ca	apability Test 50_25-25-Power Too	I			
Artikel-Nr.	Description	1				
D0000319	Running-in	of geared offset head - both direct	ions			
D0000310	Running-in	of geared offset head - working di	rection			
D0000314	Running-in	of geared offset head without certi	ficate			
Direction of rotation		RUNNING-IN TEST	TORQUE			
\odot right \bigcirc left \bigcirc right and	left	120,000		Nm 1062,09	0	in.lbs
TOOL-ADAPTION						
Tool assembly Mounting direction						
-	middle		\checkmark			
Mounting angle			degree			
INDIVIDUAL INSCRIPTION						
Your text						
Continue						

LÜBBERING SERVICES

- Machine capability analysis
- Running-in with LÜBBERING certificate
- Choose the direction of rotation
- Select "tool assembly" and we assemble the selected tool to the fastening system.
- Tailor-made description: enter your text for your fastening system here.

L.SP3 CONFIGURATOR YOUR CONFIGURATION RESULT AT A GLANCE

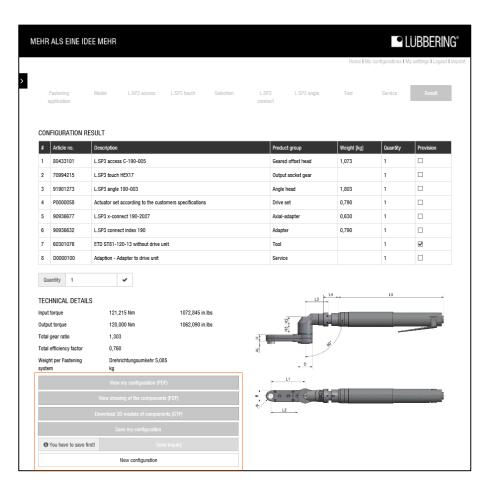

YOUR L.SP3 SOLUTION

Clear overview

- A drawing of your configured system can be shown directly
- PDF document with:
 - article-no., drawings, technical data
- Save configurations in your own account and call them up at any time
- Decide on your own when your configuration is ready.

LUBBERING

L.SP3 CONFIGURATOR YOUR ADVANTAGES AT A GLANCE

- Entire fastening system configurable: from socket gears to drive units from all major tool manufacturers
- Available online on mobile devices
- Own login account
- Save configurations and call them up at any time
- Send requests directly from the configurator
- Easy handling



Johannes Lübbering GmbH Industriestraße 4 33442 Herzebrock-Clarholz | Germany

Fon: +49 (52 45) 83 09 - 0 Fax: +49 (52 45) 83 09 - 250

info@luebbering.de | www.luebbering.de